

修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	カメラ			スピーカー
					アウト	レンズ	イン	
SE3	8,800	5,500						
13	33,000							
13mini	33,000							
12ProMax	27,500	7,700						
12Pro / 12	24,200	7,700						
12mini	24,200	7,700						
SE2	6,600	4,400	8,800		15,400	4,400	5,500	7,700
11ProMax	25,300	6,600			19,800	5,500	19,800	8,800
11Pro	18,700	6,600			18,700	5,500	18,700	8,800
11	12,100	6,600			16,500	5,500	16,500	8,800
XR	9,900	5,500		9,900	11,000	5,500	8,800	8,800
XSMAX	17,600	5,500		11,000	14,580	5,500	11,000	9,900
XS	9,900	5,500		9,900	14,300	5,500	9,900	8,800
X	7,700	3,850		8,800	12,100	5,500	8,800	8,800
8Plus	5,500	3,300	8,800	6,600	12,100	4,400	7,150	6,600
8	4,400	3,300	8,800	6,600	9,900	4,400	6,600	6,600
7Plus	4,400	2,200	8,800	5,500	11,550	3,300	5,500	6,600
7	3,850	2,200	8,800	5,500	7,150	3,300	5,500	6,600
6sPlus	3,300	2,200	4,400	4,400	5,500	3,300	4,400	4,400
6s	3,300	2,200	4,400	4,400	5,500	3,300	4,400	4,400
6Plus	3,300	2,200	4,400	4,400	5,500	3,300	4,400	4,400
6	3,300	2,200	4,400	4,400	4,400	3,300	4,400	4,400
SE	3,300	2,200	4,400	4,400	5,500	3,300	4,400	4,400
5 / 5s / 5c	3,300	2,200	4,400	4,400	4,400	3,300	4,400	4,400
修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	アウト	レンズ	イン	スピーカー
					カメラ			
<b>修理作業費</b> 1台ごとに必要です。	2,200							
<b>水没復旧</b> 修理作業費込の金額です。	受付費：3,300							
	成功費：5,500							

消費税込みの表記です。