

修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	カメラ			スピーカー	
					アウト	レンズ	イン		
15ProMax	49,000	準備中							
15Pro	47,000								
15Plus	27,000								
15	25,000								
14ProMax	47,000	7,000		27,000	25,000	7,000	18,000	9,000	
14Pro	45,000	7,000		27,000	25,000	7,000	18,000	9,000	
14Plus	17,000	7,000		22,000	17,000	7,000	16,000	9,000	
14	15,000	7,000		22,000	17,000	7,000	15,000	9,000	
SE3	8,000	4,000	6,000	11,000	9,000	4,000	7,000	7,000	
13ProMax	26,000	7,000		20,000	21,000	7,000	20,000	9,000	
13Pro	24,000	7,000		20,000	21,000	7,000	20,000	9,000	
13	15,000	7,000		15,000	17,000	7,000	13,000	9,000	
13mini	15,000	7,000		16,000	17,000	7,000	13,000	9,000	
12ProMax	12,000	5,500		14,500	17,000	6,000	14,000	9,000	
12Pro / 12	10,000	5,500		14,000	15,000	6,000	12,000	9,000	
12mini	10,000	5,500		14,500	15,000	6,000	12,000	9,000	
SE2	5,000	3,000	6,000	11,000	9,000	4,000	7,000	7,000	
11ProMax	10,000	5,500		16,000	13,000	5,000	14,000	9,000	
11Pro	8,000	5,500		16,000	13,000	5,000	13,000	9,000	
11	7,000	5,000		14,000	11,000	5,000	12,000	9,000	
XR	6,500	4,000		13,000	9,000	4,000	10,000	9,000	
XSMAX	8,000	4,000		13,000	9,000	4,000	10,000	9,000	
XS	7,500	4,000		13,000	9,000	4,000	10,000	8,000	
X	6,500	4,000		13,000	9,000	4,000	10,000	8,000	
8Plus	5,000	3,000	5,000	11,000	9,000	3,000	7,000	6,000	
8	5,000	3,000	5,000	11,000	9,000	3,000	7,000	6,000	
7Plus	5,000	3,000	5,000	10,000	7,000	3,000	7,000	6,000	
7	5,000	3,000	5,000	10,000	7,000	3,000	7,000	6,000	
6sPlus	3,000	2,500	4,000						
6s	3,000	2,500	4,000						
6Plus	3,000	2,500	4,000						
6	3,000	2,500	4,000						
SE	3,000	2,500	3,000						
5 / 5s / 5c	3,000	2,500	3,000						
修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	アウト	レンズ	イン	カメラ	スピーカー
修理作業費 1台ごとに必要です。	2,000								
水没復旧 修理作業費込の金額です。	受付費：4,000								
	成功費：5,000								

消費税込みの表記です。