

修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	カメラ			スピーカー
					アウト	レンズ	イン	
15ProMax	38,000	8,000		18,000	25,500	3,000	12,500	10,000
15Pro	36,000	8,000		17,000	25,000	3,000	12,000	9,500
15Plus	29,000	8,000		16,500	18,000	3,000	11,500	9,000
15	26,500	8,000		16,000	17,500	3,000	11,000	9,000
14ProMax	32,000	7,500		12,500	15,000	3,000	10,500	8,000
14Pro	28,000	7,500		12,000	15,000	3,000	10,500	8,000
14Plus	20,500	7,500		12,000	14,000	3,000	11,000	8,000
14	16,500	7,500		10,000	14,000	3,000	11,000	8,000
SE3	4,500	3,500	5,500	6,500	7,500	2,500	5,500	5,500
13ProMax	25,000	7,000		10,500	14,000	3,000	9,000	7,500
13Pro	24,500	7,000		9,500	14,000	3,000	9,000	7,500
13	14,000	5,500		9,000	12,500	3,000	9,000	7,500
13mini	16,000	5,500		9,000	12,500	3,000	9,000	7,500
12ProMax	14,000	5,000		7,500	18,000	3,000	7,500	7,500
12Pro	9,500	5,000		5,500	19,000	3,000	7,500	7,500
12	9,500	5,000		5,500	12,000	3,000	7,500	7,500
12mini	12,000	5,000		5,500	12,500	3,000	7,500	7,500
SE2	3,500	2,000	3,500	4,000	7,500	2,000	4,500	4,500
11ProMax	9,000	4,000		5,500	12,500	2,000	6,500	6,500
11Pro	8,000	4,000		5,500	12,000	2,000	6,500	6,500
11	6,500	4,000		5,500	9,500	2,000	6,500	5,500
XR	5,500	2,500		5,500	8,000	2,000	5,500	5,500
XSMAX	6,500	3,500		5,500	8,000	2,000	5,500	5,500
XS	5,500	3,000		5,500	8,000	2,000	5,500	5,500
X	5,500	2,500		5,000	7,500	2,000	5,500	5,500
8Plus	3,000	2,000	3,500	5,500	10,000	2,000	2,000	4,500
8	2,500	2,000	3,500	5,500	7,500	2,000	2,000	4,500
7Plus	2,500	2,000	3,500	4,500	9,500	2,000	2,000	4,500
7	2,000	2,000	3,500	4,500	3,000	2,000	2,000	4,500
6s/6sPlus	2,000	2,000	2,000	2,000	2,000	2,000	2,000	2,000
6/6Plus	2,000	2,000	2,000	2,000	2,000	2,000	2,000	2,000
SE/5/5s/5c	2,000	2,000	2,000	2,000	2,000	2,000	2,000	2,000
修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	アウト	レンズ	イン	スピーカー
					カメラ			
<b>修理作業費</b> 1台ごとに必要です。	<b>2,000</b>							
<b>水没復旧</b> 修理作業費込の金額です。	受付費：無料 復旧が成功しない限り費用はいただきません。							
	成功費：5,500							

**消費税込みの表記です。**