

修理パーツ	液晶パネル Panel	バッテリー Battery	ホームボタン Home button	充電 マイク 各種ボタン others	カメラ Camera			スピーカー Speaker	背面パネル Back panel	修理パーツ
					アウト Out	レンズ Lens	イン In			
16e	24,900									16e
16ProMax	39,900			23,900	22,900	7,900	21,900	13,900	20,000	16ProMax
16Pro	32,900			22,900	21,900	7,900	16,900	13,900	20,000	16Pro
16Plus	29,900			22,900	20,900	7,900	16,900	13,900	19,000	16Plus
16	29,900			21,900	19,900	7,900	15,900	13,900	19,000	16
15ProMax	32,900	10,500		19,900	21,900	7,900	14,900	12,900	17,000	15ProMax
15Pro	30,900	9,500		18,900	21,900	7,900	14,900	12,900	17,000	15Pro
15Plus	25,900	8,500		22,900	18,900	7,900	13,900	12,900	16,000	15Plus
15	25,900	8,500		18,900	18,900	7,900	13,900	12,900	16,000	15
14ProMax	32,500	8,500		20,000	24,000	5,000	13,000	13,000	17,000	14ProMax
14Pro	30,900	7,900		20,000	21,000	5,000	13,000	13,000	17,000	14Pro
14Plus	20,900	6,900		19,000	15,000	5,000	13,000	13,000	17,000	14Plus
14	19,900	6,900		19,000	24,000	5,000	13,000	13,000	17,000	14
SE3	6,900	3,500	7,000	8,000	10,000	3,000	9,000	5,000	20,000	SE3
13ProMax	19,900	8,500		19,000	30,000	4,000	12,000	12,000	30,000	13ProMax
13Pro	15,900	7,500		19,000	30,000	4,000	12,000	12,000	30,000	13Pro
13	11,900	5,500		17,000	15,000	4,000	12,000	9,000	25,000	13
13mini	11,900	4,900		17,000	15,000	4,000	12,000	9,000	30,000	13mini
12ProMax	12,500	5,900		19,000	30,000	4,000	11,000	12,000	25,000	12ProMax
12Pro / 12	10,500	4,900		19,000	30,000 15,000	4,000	11,000	9,000	25,000	12Pro / 12
12mini	10,900	4,900		17,000	15,000	4,000	11,000	9,000	25,000	12mini
SE2	4,500	2,500	6,000	7,000	10,000	3,000	8,000	3,000	20,000	SE2
11ProMax	9,900	5,500		18,000	20,000	3,000	10,000	8,000	25,000	11ProMax
11Pro	6,500	4,500		17,000	20,000	3,000	10,000	8,000	25,000	11Pro
11	6,500	3,500		13,000	10,000	3,000	10,000	8,000	20,000	11
XR	5,500	2,900		7,000	12,000	3,000	9,000	6,000	20,000	XR
XSMMax	7,900	3,500		7,000	12,000	3,000	9,000	6,000	20,000	XSMMax
XS	6,500	2,900		7,000	12,000	3,000	9,000	6,000	20,000	XS
X	6,500	2,500		7,000	10,000	3,000	7,000	6,000	20,000	X
8Plus	3,900	2,900	5,000	6,000	12,000	3,000	8,000	3,000	20,000	8Plus
8	3,900	2,500	5,000	6,000	8,000	3,000	7,000	3,000	19,000	8
7Plus	4,500	1,900	5,000	5,000	14,000	3,000	6,000	2,000		7Plus
7	3,900	1,900	5,000	5,000	7,500	3,000	6,000	2,000		7
6sPlus	4,500	1,900	4,000	4,000		2,000	4,000	1,000		6sPlus
6s	3,900	1,900	4,000	4,000		2,000	4,000	1,000		6s
6Plus	4,500	2,900	3,000	4,000		2,000	3,000	1,000		6Plus
6	4,500	2,500	3,000	4,000		2,000	3,000	1,000		6
5 / 5s / 5c	4,500	2,500	3,000	4,000		2,000	3,000	1,000		5 / 5s / 5c
SE	4,500	2,500	3,000	4,000		2,000	3,000	1,000		SE
修理パーツ	液晶パネル Panel	バッテリー Battery	ホームボタン Home button	充電 マイク 各種ボタン others	アウト Out	レンズ Lens	イン In	スピーカー Speaker	背面パネル Back panel	修理パーツ
					カメラ Camera					
修理作業費 Operetion cost 1台ごとに必要です。	2,000									修理作業費 Operetion cost 1台ごとに必要です。
水没復旧 Water damage 修理作業費込の金額です。	受付費：5,000									水没復旧 Water damage 修理作業費込の金額です。
	成功費：8,000									

消費税込みの表記です。