

修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	カメラ			スピーカー
					アウト	レンズ	イン	
15ProMax	49,000	準備中						
15Pro	47,000							
15Plus	27,000							
15	25,000							
14ProMax	47,000	7,000		27,000	25,000	7,000	18,000	9,000
14Pro	45,000	7,000		27,000	25,000	7,000	18,000	9,000
14Plus	17,000	7,000		22,000	17,000	7,000	16,000	9,000
14	15,000	7,000		22,000	17,000	7,000	15,000	9,000
SE3	8,000	4,000	6,000	11,000	9,000	4,000	7,000	7,000
13ProMax	26,000	7,000		20,000	21,000	7,000	20,000	9,000
13Pro	24,000	7,000		20,000	21,000	7,000	20,000	9,000
13	15,000	7,000		15,000	17,000	7,000	13,000	9,000
13mini	15,000	7,000		16,000	17,000	7,000	13,000	9,000
12ProMax	12,000	5,500		14,500	17,000	6,000	14,000	9,000
12Pro / 12	10,000	5,500		14,000	15,000	6,000	12,000	9,000
12mini	10,000	5,500		14,500	15,000	6,000	12,000	9,000
SE2	5,000	3,000	6,000	11,000	9,000	4,000	7,000	7,000
11ProMax	10,000	5,500		16,000	13,000	5,000	14,000	9,000
11Pro	8,000	5,500		16,000	13,000	5,000	13,000	9,000
11	7,000	5,000		14,000	11,000	5,000	12,000	9,000
XR	6,500	4,000		13,000	9,000	4,000	10,000	9,000
XSMaх	8,000	4,000		13,000	9,000	4,000	10,000	9,000
XS	7,500	4,000		13,000	9,000	4,000	10,000	8,000
X	6,500	4,000		13,000	9,000	4,000	10,000	8,000
8Plus	5,000	3,000	5,000	11,000	9,000	3,000	7,000	6,000
8	5,000	3,000	5,000	11,000	9,000	3,000	7,000	6,000
7Plus	5,000	3,000	5,000	10,000	7,000	3,000	7,000	6,000
7	5,000	3,000	5,000	10,000	7,000	3,000	7,000	6,000
6sPlus	3,000	2,500	4,000					
6s	3,000	2,500	4,000					
6Plus	3,000	2,500	4,000					
6	3,000	2,500	4,000					
SE	3,000	2,500	3,000					
5 / 5s / 5c	3,000	2,500	3,000					
修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	アウト	レンズ	イン	スピーカー
修理作業費 1台ごとに必要です。	2,000							
水没復旧 修理作業費込の金額です。	受付費：4,000							
	成功費：5,000							

消費税込みの表記です。