

修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	カメラ			スピーカー
					アウト	レンズ	イン	
15ProMax	29,000	9,000		ASK				
15Pro	25,000	8,500		ASK				
15Plus	22,000	7,500		ASK				
15	22,000	7,500		ASK				
14ProMax	28,000	7,500		ASK				
14Pro	24,000	7,000		ASK				
14Plus	17,000	6,000		ASK				
14	16,000	5,500		ASK				
13ProMax	16,000	4,500		ASK				
13Pro	13,000	4,500		ASK				
13mini / 13	10,000	3,500		ASK		7,800		
SE3	2,500	1,400		ASK		3,300		
12ProMax	10,000	3,500		ASK	25,000	5,800	25,000	12,000
12Pro / 12	8,000	3,500		ASK	22,000	5,800	22,000	9,000
12mini	8,000	3,500		ASK	22,000	5,800	22,000	9,000
SE2	2,500	500	5,000	ASK	12,000	2,300	8,000	3,000
11ProMax	7,000	3,500		ASK	17,000	4,300	12,000	8,000
11Pro	6,000	2,500		ASK	16,000	4,300	10,000	8,000
11	4,500	1,500		ASK	12,000	4,300	9,000	8,000
XR	4,500	1,400		ASK	10,000	3,300	7,500	7,000
XSMAX	6,500	1,500		ASK	10,000	3,300	7,500	7,000
XS	5,000	1,400		ASK	10,000	3,300	7,500	7,000
X	5,000	1,400		ASK	10,000	3,300	7,500	7,000
8Plus	3,000	400	5,000	ASK	10,000	2,300	7,000	3,000
8	2,500	400	5,000	ASK	10,000	2,300	7,000	3,000
7Plus	3,000	400	5,000	ASK	9,000	2,300	5,500	2,000
7	2,500	400	5,000	ASK	7,000	2,300	5,500	2,000
6sPlus	3,000	400	4,000	ASK	6,000	1,800	4,000	1,000
6s	2,500	400	4,000	ASK	6,000	1,800	4,000	1,000
6Plus / 6	2,500	400	3,000	ASK	6,000	1,800	3,000	1,000
SE / 5 / 5s	2,500	400	3,000	ASK	6,000	1,800	3,000	1,000
修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	アウト	レンズ	イン	スピーカー
修理作業費 1台ごとに必要です。	3,000							
水没復旧 修理作業費込の金額です。	受付費：4,000							
	成功費：5,000							

消費税込みの表記です。