

修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	カメラ			イヤースピーカー	ラウンド スピーカー	修理パーツ
					アウト	レンズ	イン			
16e	13,900									16e
16ProMax	29,900	16,500		21,900	20,900	5,900	19,900	11,900	11,900	16ProMax
16Pro	25,900	16,500		20,900	19,900	5,900	14,900	11,900	11,900	16Pro
16Plus	18,900	14,500		20,900	18,900	5,900	14,900	11,900	11,900	16Plus
16	18,900	14,500		19,900	17,900	5,900	13,900	11,900	11,900	16
15ProMax	17,900	8,000		17,900	19,900	5,900	12,900	10,900	10,900	15ProMax
15Pro	15,900	7,500		16,900	19,900	5,900	12,900	10,900	10,900	15Pro
15Plus	13,900	6,500		20,900	16,900	5,900	11,900	10,900	10,900	15Plus
15	13,900	6,500		16,900	16,900	5,900	11,900	10,900	10,900	15
14ProMax	16,900	8,000		16,900	19,900	5,900	12,900	9,900	8,900	14ProMax
14Pro	14,900	6,500		12,900	18,900	5,900	10,900	9,900	8,900	14Pro
14Plus	9,900	6,500		9,900	16,900	5,900	12,900	9,900	8,900	14Plus
14	9,900	6,500		9,900	17,900	5,900	10,900	9,900	8,900	14
SE3	3,500	2,500	6,900	7,900	9,900	3,900	7,900	6,900	8,900	SE3
13ProMax	14,900	5,500		14,900	19,900	5,900	10,900	9,900	7,900	13ProMax
13Pro	13,900	5,500		12,900	19,900	5,900	10,900	9,900	7,900	13Pro
13	8,500	4,500		9,900	14,900	5,900	9,900	8,900	7,900	13
13mini	9,900	4,500		11,900	14,900	5,900	10,900	8,900	7,900	13mini
12ProMax	9,900	4,000		9,900	24,900	4,900	8,900	8,900	9,900	12ProMax
12Pro	7,500	3,500		7,900	25,900	4,900	8,900	8,900	7,900	12Pro
12	7,500	3,500		7,900	14,900	4,900	8,900	8,900	9,900	12
12mini	8,500	3,500		7,900	14,900	4,900	8,900	8,900	9,900	12mini
SE2	2,500	2,500	6,900	6,900	9,900	3,900	6,900	6,900	5,900	SE2
11ProMax	7,900	3,000		15,900	16,900	3,900	7,900	7,900	6,900	11ProMax
11Pro	5,500	3,000		14,900	16,900	3,900	7,900	7,900	5,900	11Pro
11	4,900	2,500		7,900	10,900	3,900	7,900	6,900	5,900	11
XR	2,900	2,500		6,900	14,900	3,900	5,900	5,900	5,900	XR
XSMaX	6,500	2,500		7,900	14,900	3,900	5,900	5,900	5,900	XSMaX
XS	4,500	2,500		7,900	14,900	3,900	5,900	5,900	5,900	XS
X	4,500	2,500		6,900	13,900	3,900	5,900	5,900	5,900	X
8Plus	2,500	2,500	6,900	5,900	11,900	2,900	4,900	4,900	4,900	8Plus
8	2,500	2,500	6,900	6,900	7,900	2,900	4,900	4,900	4,900	8
7Plus	2,500	2,500	6,900	5,900	11,900	2,900	3,900	4,900	4,900	7Plus
7	2,500	2,500	6,900	5,900	9,900	2,900	3,900	4,900	4,900	7
6sPlus	2,500	2,500	3,900	3,900	4,900	2,900	3,900	3,900	3,900	6sPlus
6s	2,500	2,500	3,900	3,900	4,900	2,900	3,900	3,900	3,900	6s
6Plus / 6	2,500	2,500	3,900	3,900	3,900	2,900	3,900	3,900	3,900	6Plus / 6
SE /5 / 5s	2,500	2,500	3,900	3,900	3,900		3,900	3,900	3,900	SE /5 / 5s
修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	アウト	レンズ	イン	イヤースピーカー	ラウンド スピーカー	修理パーツ
修理作業費 1台ごとに必要です。	2,000									修理作業費 1台ごとに必要です。
水没復旧 修理作業費込の金額です。	受付費：0 ※成功しなかった場合は費用をいただきません。 成功費：7,000									水没復旧 修理作業費込の金額です。

消費税込みの表記です。