

修理パーツ	液晶パネル	バッテリー	ホームボタン	ドックコネクタ	充電 マイク 各種ボタン	カメラ			スピーカー	修理パーツ
						アウト	レンズ	イン		
16e	準備中	準備中		23,100						16e
16ProMax	準備中	準備中		23,100	21,900	20,900	5,900	19,900	11,900	16ProMax
16Pro	準備中	準備中		23,100	20,900	19,900	5,900	14,900	11,900	16Pro
16Plus	準備中	準備中		23,100	20,900	18,900	5,900	14,900	11,900	16Plus
16	38,900	準備中		23,100	19,900	17,900	5,900	13,900	11,900	16
15ProMax	31,500	7,500		21,900	17,900	19,900	5,900	12,900	10,900	15ProMax
15Pro	23,500	7,500		21,900	16,900	19,900	5,900	12,900	10,900	15Pro
15Plus	19,500	7,500		21,900	20,900	16,900	5,900	11,900	10,900	15Plus
15	16,500	6,900		21,900	16,900	16,900	5,900	11,900	10,900	15
14ProMax	24,500	7,500		21,900	16,900	19,900	5,900	12,900	9,900	14ProMax
14Pro	21,500	7,500		21,900	12,900	18,900	5,900	10,900	9,900	14Pro
14Plus	16,500	6,500		19,700	9,900	16,900	5,900	12,900	9,900	14Plus
14	14,500	6,500		19,700	9,900	17,900	5,900	10,900	9,900	14
SE3	4,500	2,900	6,900	8,800	7,900	9,900	3,900	7,900	6,900	SE3
13ProMax	21,500	6,500		19,700	14,900	19,900	5,900	10,900	9,900	13ProMax
13Pro	19,500	5,900		19,700	12,900	19,900	5,900	10,900	9,900	13Pro
13	11,500	5,900		18,000	9,900	14,900	5,900	9,900	8,900	13
13mini	13,500	6,500		18,000	11,900	14,900	5,900	10,900	8,900	13mini
12ProMax	11,500	4,500		18,400	9,900	24,900	4,900	8,900	8,900	12ProMax
12Pro	9,500	4,500		17,700	7,900	25,900	4,900	8,900	8,900	12Pro
12	9,500	4,500		16,400	7,900	14,900	4,900	8,900	8,900	12
12mini	9,500	4,500		16,400	7,900	14,900	4,900	8,900	8,900	12mini
SE2	3,500	2,500	6,900	8,800	6,900	9,900	3,900	6,900	6,900	SE2
11ProMax	10,500	4,500		18,400	15,900	16,900	3,900	7,900	7,900	11ProMax
11Pro	8,500	4,500		17,700	14,900	16,900	3,900	7,900	7,900	11Pro
11	7,500	4,500		16,400	7,900	10,900	3,900	7,900	6,900	11
XR	8,500	3,500		11,700	6,900	14,900	3,900	5,900	5,900	XR
XSMAX	7,500	3,500		13,900	7,900	14,900	3,900	5,900	5,900	XSMAX
XS	7,500	3,500		11,700	7,900	14,900	3,900	5,900	5,900	XS
X	7,500	3,500		11,700	6,900	13,900	3,900	5,900	5,900	X
8Plus	3,500	2,500		8,800	7,900	14,900	3,900	5,900	5,900	8Plus
8	3,500	2,500		8,800	6,900	13,900	3,900	5,900	5,900	8
7Plus	3,500	2,500	6,900	7,700	5,900	11,900	2,900	4,900	4,900	7Plus
7	3,500	2,500	6,900	7,700	6,900	7,900	2,900	4,900	4,900	7
6sPlus	3,500	2,500	6,900	6,400	5,900	11,900	2,900	3,900	4,900	6sPlus
6s	3,500	2,500	6,900	6,400	5,900	9,900	2,900	3,900	4,900	6s
6Plus	3,500	2,500	3,500	6,400	4,500	3,900	2,900	2,900	2,900	6Plus
6	3,500	2,500	3,500	6,400	4,500	3,900	2,900	2,500	2,900	6
SE/5 / 5s / 5c	3,500	2,500	2,900	6,400	4,500	3,900	2,900	2,500	2,900	SE/5 / 5s / 5c
修理パーツ	液晶パネル	バッテリー	ホームボタン		充電 マイク 各種ボタン	アウト	レンズ	イン	スピーカー	修理パーツ
修理作業費 1台ごとに必要です。	2,000									修理作業費 1台ごとに必要です。
水没復旧 修理作業費込の金額です。	受付費：無料 復旧が成功しない限り費用はいただきません。 成功費：7,000									水没復旧 修理作業費込の金額です。



消費税込みの表記です。