

修理パーツ	液晶パネル Panel	バッテリー Battery	ホームボタン Home button	充電 マイク 各種ボタン others	カメラ Camera			スピーカー Speaker	背面パネル Back panel	修理パーツ
					アウト Out	レンズ Lens	イン In			
16e	19,900									16e
16ProMax	33,900	8,900		23,900	22,900	7,900	21,900	13,900	20,000	16ProMax
16Pro	27,900	7,900		22,900	21,900	7,900	16,900	13,900	20,000	16Pro
16Plus	24,900	7,900		22,900	20,900	7,900	16,900	13,900	19,000	16Plus
16	24,900	7,900		21,900	19,900	7,900	15,900	13,900	19,000	16
15ProMax	26,900	7,900		19,900	21,900	7,900	14,900	12,900	17,000	15ProMax
15Pro	24,900	6,900		18,900	21,900	7,900	14,900	12,900	17,000	15Pro
15Plus	19,900	5,900		22,900	18,900	7,900	13,900	12,900	16,000	15Plus
15	19,900	5,900		18,900	18,900	7,900	13,900	12,900	16,000	15
14ProMax	26,900	5,900		20,000	24,000	5,000	13,000	13,000	17,000	14ProMax
14Pro	24,900	4,900		20,000	21,000	5,000	13,000	13,000	17,000	14Pro
14Plus	15,500	3,900		19,000	15,000	5,000	13,000	13,000	17,000	14Plus
14	14,500	3,900		19,000	24,000	5,000	13,000	13,000	17,000	14
SE3	5,500	1,900	7,000	8,000	10,000	3,000	9,000	5,000	20,000	SE3
13ProMax	14,500	4,900		19,000	30,000	4,000	12,000	12,000	30,000	13ProMax
13Pro	11,500	3,900		19,000	30,000	4,000	12,000	12,000	30,000	13Pro
13	7,900	2,900		17,000	15,000	4,000	12,000	9,000	25,000	13
13mini	7,900	2,900		17,000	15,000	4,000	12,000	9,000	30,000	13mini
12ProMax	8,900	3,500		19,000	30,000	4,000	11,000	12,000	25,000	12ProMax
12Pro / 12	6,900	2,500		19,000	30,000 15,000	4,000	11,000	9,000	25,000	12Pro / 12
12mini	6,900	2,900		17,000	15,000	4,000	11,000	9,000	25,000	12mini
SE2	3,500	1,500	6,000	7,000	10,000	3,000	8,000	3,000	20,000	SE2
11ProMax	7,900	2,900		18,000	20,000	3,000	10,000	8,000	25,000	11ProMax
11Pro	4,900	2,500		17,000	20,000	3,000	10,000	8,000	25,000	11Pro
11	4,900	1,500		13,000	10,000	3,000	10,000	8,000	20,000	11
XR	3,900	1,500		7,000	12,000	3,000	9,000	6,000	20,000	XR
XSMax	5,900	1,900		7,000	12,000	3,000	9,000	6,000	20,000	XSMax
XS	4,900	900		7,000	12,000	3,000	9,000	6,000	20,000	XS
X	4,900	900		7,000	10,000	3,000	7,000	6,000	20,000	X
8Plus	2,900	1,500	5,000	6,000	12,000	3,000	8,000	3,000	20,000	8Plus
8	2,900	900	5,000	6,000	8,000	3,000	7,000	3,000	19,000	8
7Plus	3,500	900	5,000	5,000	14,000	3,000	6,000	2,000		7Plus
7	2,900	500	5,000	5,000	7,500	3,000	6,000	2,000		7
6sPlus	3,500	500	4,000	4,000		2,000	4,000	1,000		6sPlus
6s	2,900	500	4,000	4,000		2,000	4,000	1,000		6s
6Plus	3,500	1,500	3,000	4,000		2,000	3,000	1,000		6Plus
6	3,500	1,500	3,000	4,000		2,000	3,000	1,000		6
5 / 5s / 5c	3,500	1,500	3,000	4,000		2,000	3,000	1,000		5 / 5s / 5c
SE	3,500	1,500	3,000	4,000		2,000	3,000	1,000		SE
修理パーツ	液晶パネル Panel	バッテリー Battery	ホームボタン Home button	充電 マイク 各種ボタン others	アウト Out	レンズ Lens	イン In	スピーカー Speaker	背面パネル Back panel	修理パーツ
修理作業費 Operetion cost 1台ごとに必要です。	3,000									修理作業費 Operetion cost 1台ごとに必要です。
水没復旧 Water damage 修理作業費込の金額で す。	受付費：5,000									水没復旧 Water damage 修理作業費込の金額で す。
	成功費：8,000									

消費税込みの表記です。