

修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	カメラ			スピーカー
					アウト	レンズ	イン	
15ProMax	24,000	13,000		27,000		7,000		
15Pro	21,000	12,500		27,000		7,000		
15Plus	19,000	12,500		22,000		7,000		
15	18,000	12,000		22,000		7,000		
14ProMax	23,000	12,000		20,000	25,000	7,000	18,000	9,000
14Pro	21,000	11,500		20,000	25,000	7,000	18,000	9,000
14Plus	17,000	11,500		17,000	17,000	7,000	16,000	9,000
14	15,000	11,000		17,000	17,000	7,000	15,000	9,000
SE3	8,000	4,000	6,000	11,000	9,000	4,000	7,000	7,000
SE2	5,000	3,000	6,000	9,000	9,000	4,000	7,000	7,000
13ProMax	26,000	7,000		12,000	21,000	7,000	20,000	9,000
13Pro	24,000	7,000		11,500	21,000	7,000	20,000	9,000
13	15,000	7,000		10,000	17,000	7,000	13,000	9,000
13mini	15,000	7,000		10,000	17,000	7,000	13,000	9,000
12ProMax	12,000	5,500		9,000	17,000	6,000	14,000	9,000
12Pro / 12	10,000	5,500		9,000	15,000	6,000	12,000	9,000
12mini	10,000	5,500		9,000	15,000	6,000	12,000	9,000
11ProMax	10,000	5,500		12,000	13,000	5,000	14,000	9,000
11Pro	8,000	5,500		12,000	13,000	5,000	13,000	9,000
11	7,000	5,000		11,000	11,000	5,000	12,000	9,000
XR	6,500	4,000		9,000	9,000	4,000	10,000	9,000
XSMax	8,000	4,000		9,000	9,000	4,000	10,000	9,000
XS	7,500	4,000		9,000	9,000	4,000	10,000	8,000
X	6,500	4,000		9,000	9,000	4,000	10,000	8,000
8Plus	5,000	3,000	5,000	9,000	9,000	3,000	7,000	6,000
8	5,000	3,000	5,000	9,000	9,000	3,000	7,000	6,000
7Plus	5,000	3,000	5,000	9,000	7,000	3,000	7,000	6,000
7	5,000	3,000	5,000	9,000	7,000	3,000	7,000	6,000
6sPlus	3,000	2,500	4,000					
6s	3,000	2,500	4,000					
6Plus	3,000	2,500	4,000					
6	3,000	2,500	4,000					
SE	3,000	2,500	3,000					
5 / 5s / 5c	3,000	2,500	3,000					
修理パーツ	液晶パネル	バッテリー	ホームボタン	充電 マイク 各種ボタン	アウト	レンズ	イン	スピーカー
<b>修理作業費</b> 1台ごとに必要です。	2,000							
<b>水没復旧</b> 修理作業費込の金額です。	受付費：4,000							
	成功費：5,000							

消費税込みの表記です。