

修理パーツ	液晶パネル	バッテリー	ホームボタン	ドックコネクタ	充電 マイク 各種ボタン	カメラ			スピーカー	修理パーツ
						アウト	レンズ	イン		
17e	29,500									17e
17ProMax	49,900	15,900								17ProMax
17Pro	43,900	15,500								17Pro
17	40,500	14,900								17
16e	19,900	12,500		23,100						16e
16ProMax	34,900	11,900		23,100	21,900	20,900	5,900	19,900	11,900	16ProMax
16Pro	31,900	11,500		23,100	20,900	19,900	5,900	14,900	11,900	16Pro
16Plus	26,900	9,900		23,100	20,900	18,900	5,900	14,900	11,900	16Plus
16	25,900	9,900		23,100	19,900	17,900	5,900	13,900	11,900	16
15ProMax	26,500	9,900		21,900	17,900	19,900	5,900	12,900	10,900	15ProMax
15Pro	24,500	9,500		21,900	16,900	19,900	5,900	12,900	10,900	15Pro
15Plus	20,900	9,500		21,900	20,900	16,900	5,900	11,900	10,900	15Plus
15	19,900	8,900		21,900	16,900	16,900	5,900	11,900	10,900	15
14ProMax	25,500	8,900		21,900	16,900	19,900	5,900	12,900	9,900	14ProMax
14Pro	21,900	8,500		21,900	12,900	18,900	5,900	10,900	9,900	14Pro
14Plus	17,900	8,500		19,700	9,900	16,900	5,900	12,900	9,900	14Plus
14	16,900	7,900		19,700	9,900	17,900	5,900	10,900	9,900	14
SE3	5,900	3,900	6,900	8,800	7,900	9,900	3,900	7,900	6,900	SE3
13ProMax	19,900	7,500		19,700	14,900	19,900	5,900	10,900	9,900	13ProMax
13Pro	18,900	6,900		19,700	12,900	19,900	5,900	10,900	9,900	13Pro
13	15,500	6,900		18,000	9,900	14,900	5,900	9,900	8,900	13
13mini	16,500	6,900		18,000	11,900	14,900	5,900	10,900	8,900	13mini
12ProMax	16,500	6,500		18,400	9,900	24,900	4,900	8,900	8,900	12ProMax
12Pro	12,500	5,900		17,700	7,900	25,900	4,900	8,900	8,900	12Pro
12	12,500	5,900		16,400	7,900	14,900	4,900	8,900	8,900	12
12mini	13,900	7,900		16,400	7,900	14,900	4,900	8,900	8,900	12mini
SE2	4,900	3,500	6,900	8,800	6,900	9,900	3,900	6,900	6,900	SE2
11ProMax	13,500	4,900		18,400	15,900	16,900	3,900	7,900	7,900	11ProMax
11Pro	12,500	4,900		17,700	14,900	16,900	3,900	7,900	7,900	11Pro
11	10,500	4,500		16,400	7,900	10,900	3,900	7,900	6,900	11
XR	8,900	3,900		11,700	6,900	14,900	3,900	5,900	5,900	XR
XSMMax	11,500	3,900		13,900	7,900	14,900	3,900	5,900	5,900	XSMMax
XS	8,900	3,900		11,700	7,900	14,900	3,900	5,900	5,900	XS
X	8,500	3,500		11,700	6,900	13,900	3,900	5,900	5,900	X
8Plus	5,500	3,500		8,800	7,900	14,900	3,900	5,900	5,900	8Plus
8	4,900	3,500		8,800	6,900	13,900	3,900	5,900	5,900	8
7Plus	5,900	2,500	6,900	7,700	5,900	11,900	2,900	4,900	4,900	7Plus
7	4,500	2,500	6,900	7,700	6,900	7,900	2,900	4,900	4,900	7
6sPlus	4,900	2,500	6,900	6,400	5,900	11,900	2,900	3,900	4,900	6sPlus
6s	4,900	2,500	6,900	6,400	5,900	9,900	2,900	3,900	4,900	6s
6Plus	4,900	2,500	3,500	6,400	4,500	3,900	2,900	2,900	2,900	6Plus
6	4,900	2,500	3,500	6,400	4,500	3,900	2,900	2,500	2,900	6
SE/5 / 5s / 5c	4,900	2,500	2,900	6,400	4,500	3,900	2,900	2,500	2,900	SE/5 / 5s / 5c
修理パーツ	液晶パネル	バッテリー	ホームボタン	ドックコネクタ	充電 マイク 各種ボタン	アウト	レンズ	イン	スピーカー	修理パーツ
						カメラ				